

The Genuine. The Original.



## THE OVERHEAD DOOR COMPANY OF GREATER CINCINNATI

WWW.OVERHEADDOORCINCY.COM

### TRANSMITTER SWITCH SETTINGS

switch #	1	2	3	4	5	6	7	8	9	10	11	12
up or down												
result												

UP	UP	UP	7
UP	UP	DOWN	6
UP	DOWN	UP	5
UP	DOWN	DOWN	4
DOWN	UP	UP	3
DOWN	UP	DOWN	2
DOWN	DOWN	UP	1
DOWN	DOWN	DOWN	0

Open cover on keypad just enough to press [#] & [8] at the same time. While pressing these two buttons, raise the cover all the way (this erases the old code). Release the buttons.

**Close keypad cover fully. Open keypad cover fully.**

Press and release [3] then [5] then [7] then [#]  
(the light should be blinking about once a second).

Enter your new **PIN** number and press [\*] red light will turn off.

**Close keypad cover fully.**

Slide keypad cover open fully and enter the **PIN** number and press [\*] to operate the door.

THIS UNIT IS NO LONGER SUPPORTED BY THE  
FACTORY- SLIDE UP KEYPAD COVER AND BATTERY  
COVERS ARE NOT AVAILABLE.

### G - SERIES KEYPAD

